


SCALE: NTS

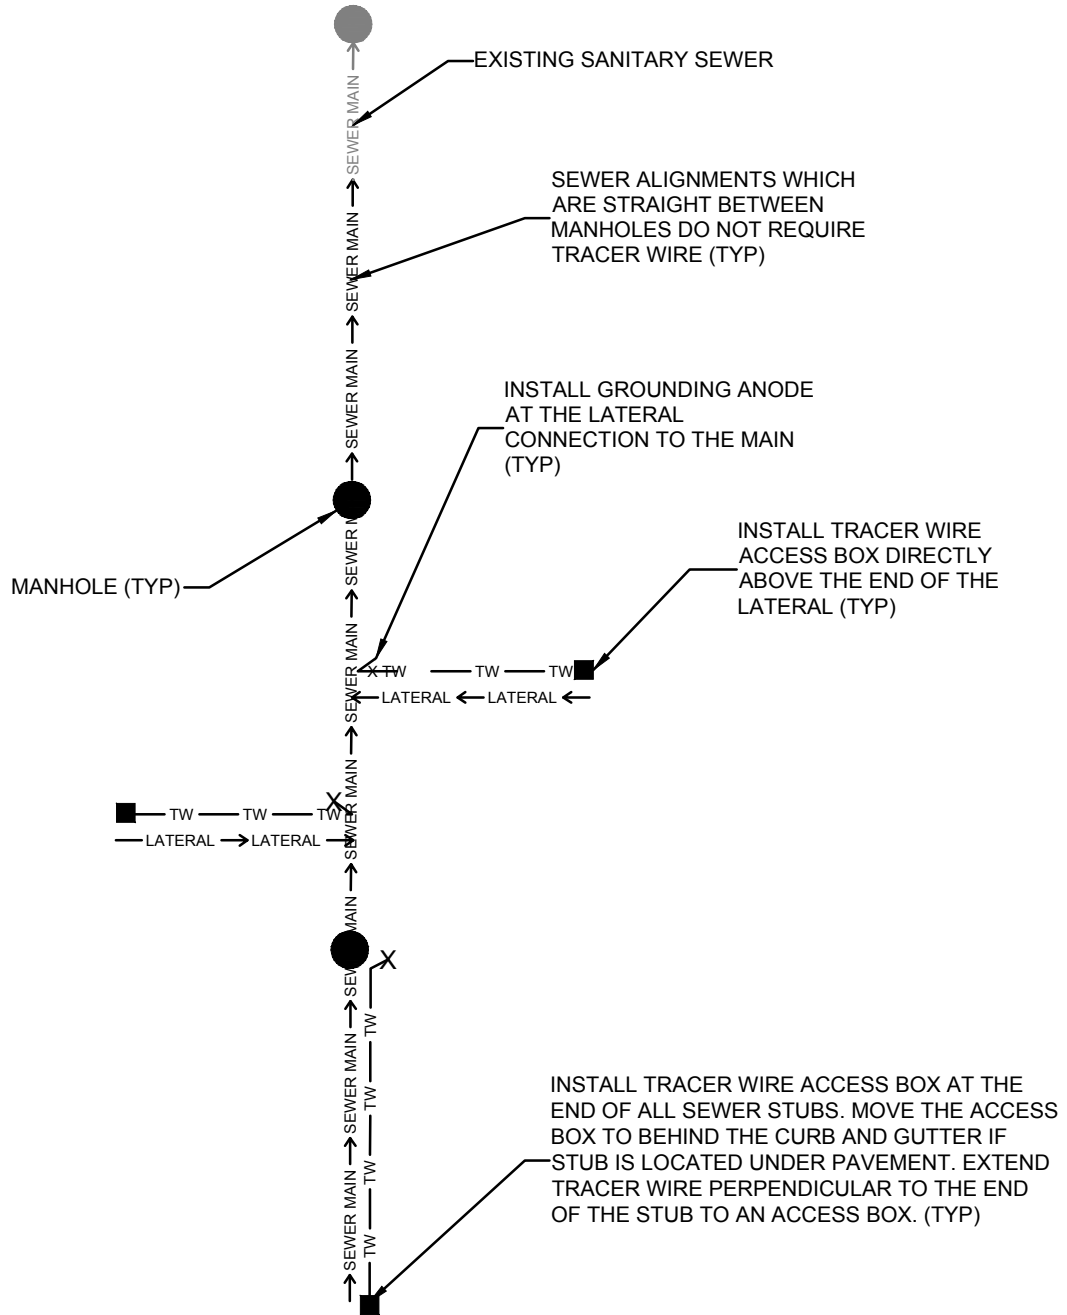

NOTES:

1. REFER TO SPECIFICATIONS FOR TRACER WIRE.
2. TRACER WIRE SHALL BE TAPED TO MAIN AND LATERALS. WIRE IS SHOWN OFF MAIN AND LATERALS FOR CLARITY.
3. INSTALL GROUNDING ANODE BY DRIVING INTO VIRGIN GROUND AT THE MAIN CONNECTION. RUN GROUND WIRE DOWN RISER IF APPLICABLE.
4. TRACER WIRE ACCESS BOX SHALL BE INSTALLED DIRECTLY ABOVE THE END OF LATERALS / STUBS UNLESS THE END IS UNDER PAVEMENT. IF THE END IS UNDER PAVEMENT EXTEND THE TRACER WIRE PERPENDICULAR TO THE UTILITY AT A MINIMUM DEPTH OF 30" TO AN ACCESS BOX LOCATED JUST BEYOND THE CURB AND GUTTER.

**TRACER WIRE INSTALLATION ON
SANITARY & STORM SEWERS**

DETAIL: TW - 2

DATE: 12-17-18

APPROVED BY: MATT FINEOUR

**VILLAGE OF PLEASANT PRAIRIE
KENOSHA COUNTY, WISCONSIN**