


NOTES:

1. ALL INACTIVE (DEAD) SEWER MAIN AND LATERALS, EXCEPT MAINS OR LATERALS TO POSSIBLE FUTURE DEVELOPMENT, SHALL BE ABANDONED.
2. PIPE CONNECTIONS MADE BY A RUBBER BOOT SHALL BE ABANDONED AT THE MANHOLE BY REMOVING THE EXISTING PIPE FROM THE BOOT AND REPLACING IT WITH A PVC PLUG. ABANDON ALL OTHER PIPES BY CUTTING THE PIPE AT THE MANHOLE AND SEALING THE PIPE END WITH A FERNCO FLEXIBLE COUPLING AND PVC PLUG.
3. ABANDON THE REMAINDER OF THE EXISTING PIPE WITHIN 5' OF THE BACK OF CURB OR EDGE OF SHOULDER BY FILLING WITH A FLOWABLE FILL AND INSTALLING A CAP OR PLUG. PROVIDE A WATERTIGHT PVC CAP ON PVC PIPE AND PLUG ALL OTHER PIPE WITH A FERNCO AND PVC PLUG. FLOWABLE FILL SHALL BE CONCRETE, SLURRY OR APPROVED EQUAL.

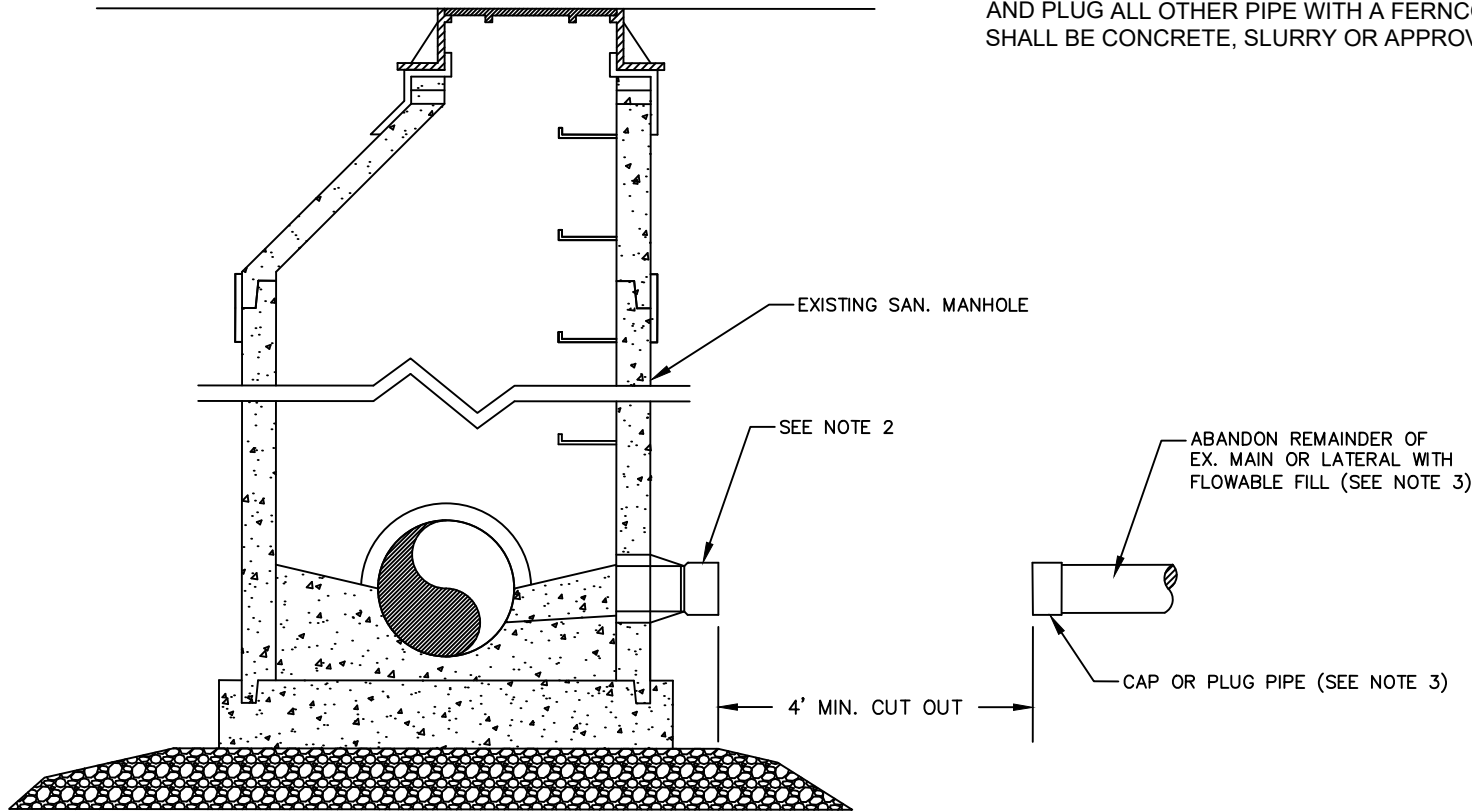

SCALE: NTS

SANITARY PIPE ABANDONMENT AT EXISTING MANHOLE

DETAIL: SAN - 5

DATE: 4-22-20

APPROVED BY: MATT FINEOUR

VILLAGE OF PLEASANT PRAIRIE
KENOSHA COUNTY, WISCONSIN